

ZSERIES  
ACCESSORIES

since 1988  
AUDIO  
SYSTEM  
german sound

# HLC2 EVO2

2-CHANNEL HIGH/LOW CONVERTER



WWW.AUDIO-SYSTEM.DE





## BEDIENUNGSANLEITUNG / MANUAL

# HLC2 EVO2

since 1988  
AUDIO  
SYSTEM  
german sound

Klemmen Sie zu allererst die Stromversorgung (Batterie) des Fahrzeugs ab. Verbinden Sie die Lautsprecher-  
ausgänge des Steuergeräts (Radio) mit den entsprechenden Eingängen [INPUT] am **HLC2 EVO2**. Auf richtig  
Polung achten..! Verbinden Sie die **HLC2 EVO2** Ausgänge [OUTPUT] via Cinchkabel mit den  
entsprechenden Eingängen einer Endstufe oder eines Soundprozessors (**Anschlussbild 1**). Wenn Ihr Steuergerät  
über einen **Remoteausgang** verfügt, schließen Sie die Endstufe direkt an diesen an. Falls dies nicht der Fall ist,  
verfügt der **HLC2 EVO2** über eine Remote-Steuerung (**Anschlussbild 2**). Verbinden Sie zunächst den  
Pluspol [B+]. Nehmen Sie die 12 V Spannung unbedingt hinter einer Sicherung ab. Danach verbinden Sie den  
Minuspol [GND] mit der Masse. Der **REMOTE OUT** des **HLC2 EVO2** wird mit dem Remote der Endstufe  
verbunden. Das HLC2 schaltet nur die Endstufe ein, wenn an dem Lautsprechereingang ein Signal anliegt.

**!.. ACHTUNG ..!** Bevor Sie die Stromversorgung wieder anschließen, vergewissern Sie sich, dass alle Kabel  
dem Schaltbild entsprechend angeschlossen und ordnungsgemäß verlegt sind. Sorgen Sie für eine professionelle  
Befestigung des **HLC2 EVO2**.

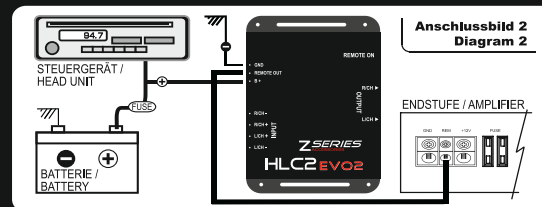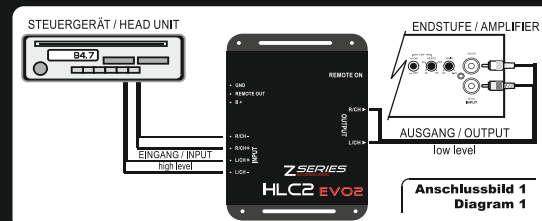

First disconnect the power supply (battery) of the vehicle. Connect the speaker output from the head unit (radio) to  
the „High Level“ INPUT of the **HLC2 EVO2**. Pay attention for the right way of connection. Afterwards  
transfer the **HLC2 EVO2 OUTPUT** through cinch cables (RCA) to RCA-Input of the amplifier or to the sound  
processor (**diagramm 1**). If the head unit provides a remote-output than please connect the amplifier directly to  
the remote-terminal. Otherwise the **HLC2 EVO2** provides a remote control (**diagramm 2**). First bond the  
positiv terminal [B+]. Important: Connect the + 12 voltage after a fuse. Afterwards, connect the negativ terminal  
[GND] with the ground of the car chassis. The **REMOTE OUT** of the **HLC2 EVO2** has to be connected to the  
remote-terminal of the amplifier. The **HLC2 EVO2** only turns on the amp if a loudspeaker is installed.

**!.. CAUTION ..!** Before reconnecting the power supply (battery) make sure that all cables are connected and  
laided correctly accordingly to the circuit diagram. Take care of a professional attachment for the **HLC2  
EVO2**.

WWW.AUDIO-SYSTEM.DE

